


LEAD FLASHING GUIDE - LITESTACK CHIMNEYS

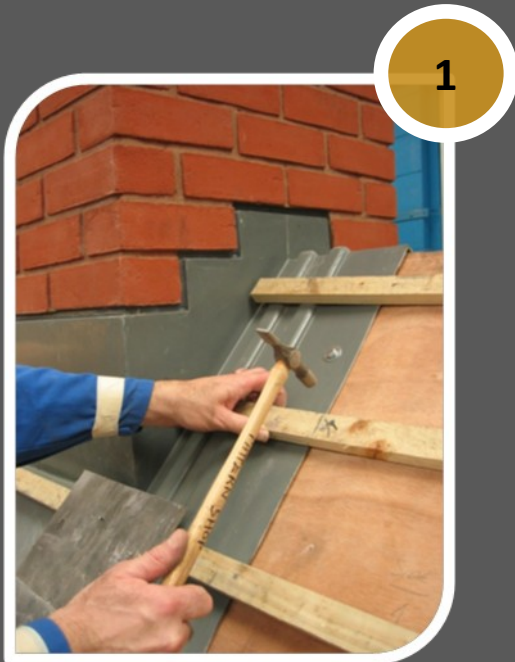

Once the chimney is bolted to the roof – notch out tiling lath and nail into place



Nail tiles/slates to lath, ensuring they butt up to grey chimney upstand



Trim lead to size and cut out notches where mortar lines fall



Tuck lead flap up under GRP brickwork

LEAD FLASHING GUIDE - LITESTACK CHIMNEYS




Drill through lead and into grey GRP upstand



Fix lead in place with domed-head screws



Run a bead of lead mastic along the recess covering the screw-heads

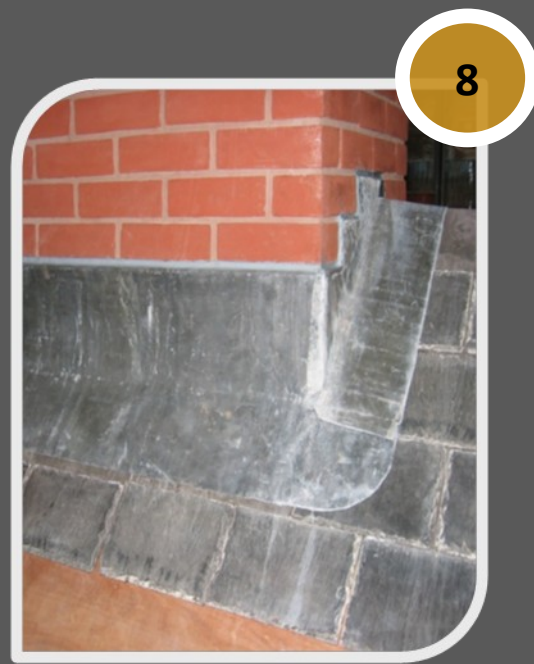

Repeat the process on each side of the chimney until the unit is fully sealed